

Replacement remote control for SONY RMF-TX310E TV



Number of devices	1
Controllable devices	TV SONY
Controls	Controls all functions
Functions	Same as the original including voice command
Brands	SONY RMF-TX310E
Type of programming	Pairing with the TV
Batteries	2x 1,5 V - AAA (not included)
Code stored	Does not lose memory during battery replacement



Packaging 10 x 28 x 3 cms



Quantity
in master
carton
30 pz.



Via delle Valli, snc
04011, Aprilia (LT)
www.jollyline.it