Replacement remote control for SONY RMF-TX500 TV



Number of devices

Controllable devices TV SONY

Controls Controls all functions

Functions Same as the original including voice command

Brands SONY RMF-TX500

Type of programming Pairing with the TV

Batteries 2x 1,5 V - AAA (not included)

Code stored Does not lose memory during battery replacement







Packaging 10 x 28 x 3 cms







