

Replacement remote control for Multi Brand TV's with symbology as the original one



Number of devices

1

Controllable devices

TV AMSTRAD, AUTOVOX, BLOOM, BLUESKY, CLATRONIC, CRANKER, DIGIHOME, DIGIQUEST, DIKOM, EUROVISION, FENNER, FERGUSON, FINLUX, FIRST LINE, GOLDTECH, GOODMAN, GRAETZ, HITACHI, INEXIVE, INNO HIT, KENNEX, LAZER, LUXOR, NEXIUS, NIKKEI, NORDMENDE, ORION, PROLINE, QILIVE, SABA, SCHAUB-LORENZ, SCHNEIDER, SEG, SELECLINE, SELECO, SHADOW, TECHWOOD, TELEFUNKEN, TELESYSTEM, TELETECH, TENSAI, ULTRAVOX and WEGAVOX

Controls

Controls all functions

Functions

Menu, AV, Teletext, Color

Brands

It works with all AMSTRAD, AUTOVOX, BLOOM, BLUESKY, CLATRONIC, CRANKER, DIGIHOME, DIGIQUEST, DIKOM, EUROVISION, FENNER, FERGUSON, FINLUX, FIRST LINE, GOLDTECH, GOODMAN, GRAETZ, HITACHI, INEXIVE, INNO HIT, KENNEX, LAZER, LUXOR, NEXIUS, NIKKEI, NORDMENDE, ORION, PROLINE, QILIVE, SABA, SCHAUB-LORENZ, SCHNEIDER, SEG, SELECLINE, SELECO, SHADOW, TECHWOOD, TELEFUNKEN, TELESYSTEM, TELETECH, TENSAI, ULTRAVOX and WEGAVOX models

Type of programming

No need of programming. You only have to insert batteries and it is ready to be used.

Batteries

2x 1,5 V - AAA (not included)

Code stored

Does not lose memory during battery replacement



Packaging 6 x 29 x 3 cms



Quantity in master carton
50 pz.