

Replacement Remote Control for TELEFUNKEN RC-45157 TV



Number of devices

1

Controllable devices

TV TELEFUNKEN

Controls

Controls all functions

Functions

Same as the original

Brands

TELEFUNKEN RC-45157

Type of programming

No need of programming. You only have to insert batteries and it is ready to be used.

Batteries

2x 1,5 V - AAA (not included)

Code stored

Does not lose memory during battery replacement



Packaging 6 x 26 x 3 cms



Quantity in
master carton
30 pz.