



why | LITE
433

433,92 MHz
Codici fissi e Rolling code

PER ISTRUZIONI COMPLETE E LISTA
DI COMPATIBILITÀ AGGIORNATA
Visita il nostro sito why-evo.com



Accessorio disponibile su richiesta

why | visor clip

cod. 8999966



WHY 433 LITE

AUTOAPPRENDIMENTO

Cod. 4791024

Posizioni migliori
per la duplicazione

alternativa 1
TESTA CONTRO TESTA




alternativa 2
SCHIENA CONTRO SCHIENA




PROCEDURE DUPLICAZIONE


CODICI FISSI

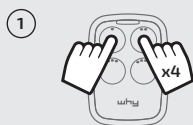

1 tenere premuto il tasto 1 e contemporaneamente premere 4 volte il tasto 2

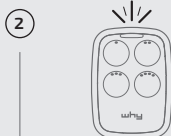

2 il led lampeggia ogni 2 sec.

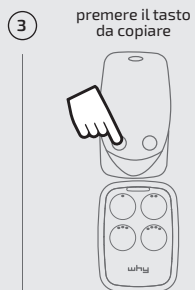

3 premere il tasto da copiare
il led lampeggia veloce




4 premere il tasto in cui si desidera memorizzare il codice

5

**PROCEDURA INSERIMENTO
IN RICEVENTE**

FUNZIONAMENTO DIRETTO

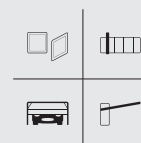




ROLLING SIMPLE

*consultare la lista di compatibilità

- 1 tenere premuto il tasto 1 e contemporaneamente premere 4 volte il tasto 2
- 2 il led lampeggia ogni 2 sec.
- 3 premere il tasto da copiare
il led lampeggia veloce
- 4 premere il tasto in cui si desidera memorizzare il codice

PROCEDURA INSERIMENTO IN RICEVENTE*

-  PROGRAMMAZIONE DIRETTA SU RICEVITORE
-  AGIRE SULLA RICEVENTE

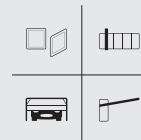

ROLLING COMPLEX (BFT MITTO)

RADIOCOMANDI COMPATIBILI





- 1 tenere premuto il tasto 1 e contemporaneamente premere 4 volte il tasto 2
- 2 il led lampeggia ogni 2 sec.
- 3 premere il tasto da copiare
il led passa a luce fissa per poi emettere un doppio lampeggio ogni sec.
- 4 premere contemporaneamente i tasti 1 e 2 del trasmettitore BFT (codice sorgente)**
il led lampeggia veloce

**Nelle versioni meno recenti, servendosi di uno spillo premere il tasto nascosto che si trova sul retro del trasmettitore.



PROCEDURA INSERIMENTO IN RICEVENTE*

-  PROGRAMMAZIONE DIRETTA SU RICEVITORE
-  AGIRE SULLA RICEVENTE

ROLLING COMPLEX (FAAC)


ATTENZIONE: VERIFICARE CHE IL RADIOCOMANDO DA COPIARE SIA UN MASTER. Premendo un tasto qualsiasi, il led deve emettere un doppio lampeggio anziché accendersi subito a luce fissa.

RADIOCOMANDI COMPATIBILI




- 1 tenere premuto il tasto 1 e contemporaneamente premere 4 volte il tasto 2
- 2 il led lampeggia ogni 2 sec.
- 3 premere il tasto da copiare
il led passa a luce fissa per poi emettere un doppio lampeggio ogni sec.
- 4 premere insieme entrambi i tasti e rilasciarli quando il led lampeggia
- 5 mentre il led lampeggia premere il tasto da copiare
il led lampeggia veloce
- 6 premere il tasto in cui si desidera memorizzare il codice


PROCEDURA INSERIMENTO IN RICEVENTE

-  FUNZIONAMENTO DIRETTO


Se il codice presente è un CODICE FISSO O ROLLING SIMPLE

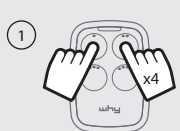


1 tenere premuto il tasto 1 e contemporaneamente premere 4 volte il tasto 2 del WHY NUOVO

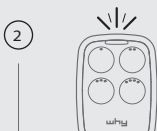


2 il led del WHY NUOVO lampeggia ogni 2 sec.

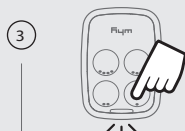


3 premere il tasto da copiare del WHY VECCHIO

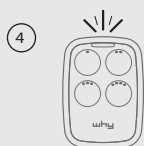


4 il led del WHY NUOVO lampeggia veloce

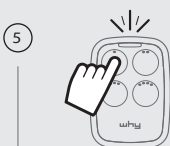

5 premere il tasto del WHY NUOVO in cui si desidera memorizzare il codice

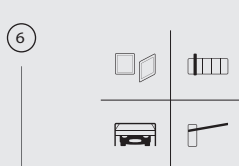

CODICE FISSO

 


ROLLING SIMPLE


PROCEDURA INSERIMENTO IN RICEVENTE

- PROGRAMMAZIONE DIRETTA SU RICEVITORE
- AGIRE IN RICEVENTE


Se il codice presente è un ROLLING COMPLEX

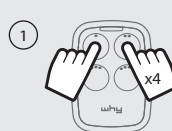

1 tenere premuto il tasto 1 e contemporaneamente premere 4 volte il tasto 2 del WHY NUOVO

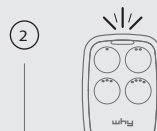


2 il led del WHY NUOVO lampeggia ogni 2 sec.

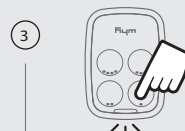


3 premere il tasto da copiare del WHY VECCHIO



4 doppio lampeggio led veloce del WHY NUOVO

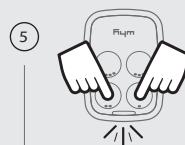


5 premere contemporaneamente i tasti 1 e 2 del WHY VECCHIO e rilasciarli quando il led inizia a lampeggiare

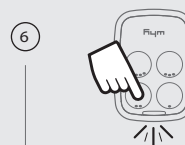


6 mentre il led del WHY VECCHIO lampeggia premere il tasto da copiare



4 il led del WHY NUOVO lampeggia veloce

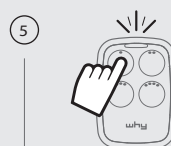

5 premere il tasto del WHY NUOVO in cui si desidera memorizzare il codice

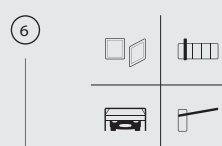

PROCEDURA INSERIMENTO IN RICEVENTE











































 








- PROGRAMMAZIONE DIRETTA SU RICEVITORE
- FUNZIONAMENTO DIRETTO
- AGIRE IN RICEVENTE

LISTA COMPATIBILITÀ WHY LITE

Legenda:  PROGRAMMAZIONE DIRETTA SU RICEVITORE

 AGIRE SULLA RICEVENTE

 FUNZIONAMENTO DIRETTO

ACM TX2, TX2 COLOR, TX4		FAAC XT 433 RC, TE433HG, XT4 433 RCBE		ROPER NEO	
ADYX TE4433H BLUE, 433-HG BRAVO		FADINI JUBI-SMALL, JUBI 433, DIVO 71/4		SABUTOM BROOVER, BROSTAR	
AERF COMPACT, HY-DOM, MERCURI B, MERCURI C, SABUTON, MARS, SATURN, ST3/N, TERRA, TMP-1, TMP-2, UNITECH		GENIUS BRAVO, ECHO		SEAV BE HAPPY RS, BE SMART	
ALLMATIC BROWN, BROWN RED, BRO.OVER, PASS, MINIPASS, TECH3, FOR4		GIBIDI AU1600, AU1600 WOOD , AU1680, AU1680 WOOD, DOMINO, MAKO		SECULUX NEO	
APRIMATIC TR, TM4, TXM		JCM NEO, TWIN		SILVELOX MHz 2007, QUARZ SAW	
AVIDSEN 104251, 104250, 104250 OLD, 104250 RED, 104257, 104350, 654250, TX4 114253		KBLUE ETH-TEL01		SIMINOR CVXNL, MITTO	
BENINCA TO, GO, WV, TWV, ROLLKEY, APPLE, LOT WCV, CUPIDO, HAPPY VA, TO.GO. VA		KEY 900TXB-42R, TXB 44R, SUB 44R		SIMINOR SIM433	
BENINCA IO		KING GATES CLIPPER, STYLO		SOMFY K-EASY, K-EASY NEW, K-EASY OLD, MITTO, KEY GO RTS, TELIS RTS, KEYTIS RTS, KEYTIS RTS NS, ALARMA	
BFT MITTO, MITTO M, MITTO RCB, MITTO A, TRC, GHIBLI, MURALE, KLEIO		KLING KUA, KUA E, KUA S		STAGNOLI KALLISTO, VENUS AV223	
CASALI GENIUS/CASALI A252RC		LIFE FIDO		TAU 250K-SLIMRP, 250K-SLIMR, 250T-4RP	
CLEMSA MUTANCODE, T, T-8, E-CODE N		MHOUSE TX3, TX4, GTX4		TOR LIFT TORMIT4	
DASPI ZERO RC		MOOVO MT4G		V2 TSC, TXC, TRC, HANDY, PHOENIX, PHOX 433	
DEA SYSTEM PUNTO 278, GOLDR, GENIE R 273, GENIE R-GT2M, MIO TR, GT2M, TRN		NICE SMILO, FLOR-S, VERY-VR, FLOR-S ERA , INTI, ERGO, PLANO		VDS ECO-R, TRQ P	
DITEC/ENTREMATI BIXLP, GOL4, BIXLG, ZEN		NORTON NEO, TXCD			
DOORHAN TRANSMITTER 4		NOVOFERM MCHS, MICRO-NOVOTRON 502, MINI-NOVOTRON 504, MICRO-NOVOTRON 502, MICRO-NOVOTRON 504, MICRO-NOVOTRON 31, MICRO-NOVOTRON 51, MINI- NOVOTRON 30, MINI-NOVOTRON 50, MNHS, MINI NOVOTRON 522			
DOORMATIC MILENY, MILENY-EVO		O&O TX, T.COM R4-2, TWIN, TX (NEO)			
ECOSTAR RSC, RSE, RSZ		PRASTEL MTE, MPSTLE, MPSTP2E, TCE, BFOR, TRQ-P, SLIM-E			
ERREKA IRIS, ROLLER 2, ROLLER 433, SOL433, VEGA 433		PUJOL Attenzione possibili personalizzazioni non duplicabili TWIN, VARIO, VARIO MARS, VARIO OCEAN, NEO			
FAAC TML 433SLH, XT 433 SLH, T 433 SLH, XT 433 SLH BLACK		RIB LITHIO			

PROGRAMMAZIONE DIRETTA SU RICEVITORE

In prossimità dell'automazione e prima di aver utilizzato il radiocomando originale, premere e mantenere premuto il tasto del radiocomando WHY LITE fino a quando il led inizierà a lampeggiare. Attendere la fine del lampeggio.

AGIRE IN RICEVENTE

In prossimità dell'automazione e prima di aver utilizzato il radiocomando originale, premere e rilasciare il tasto PRG o PGM presente in ricevente, di seguito premere il tasto del radiocomando WHY LITE.

FUNZIONAMENTO DIRETTO

In prossimità dell'automazione e prima di aver utilizzato il radiocomando originale, premere il tasto del radiocomando WHY LITE 4/5 volte.



WHY 433 LITE

ART. 4791024



Best position for the duplication

1 solution
HEAD TO HEAD



2 solution
BACK TO BACK



IT IS RECOMMENDED:

TO REALIZE A CORRECT DUPLICATION OF THE REMOTE CONTROLS, WE RECOMMEND TO FOLLOW THE PROCEDURES HERE BELOW TAKING CARE TO DISTANCE YOURSELF BY TOOL THAT CAN GENERATE FREQUENCY TROUBLES AS:

- CORDLESS
- WI-FI VIDEO SURVEILLANCE DEVICES
- MOBILE PHONES, SMARTPHONES OR TABLETS
- WI-FI OR BLUETOOTH ACTIVATED IN YOUR COMPUTERS
- ELECTRONIC MOTOR
- NEON LIGHTS
- WIRELESS DEVICES FOR BACK END MANAGEMENT IN THE BUSINESS STORES

1. While pressing the button 1 of the "WHY 433", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY 433 LED emits a short flash every 2 seconds.
3. Place the remote control in front of the WHY 433 (back to back as in the image).
4. Press and retain pressed the button of the original remote control and wait for a change flash (as a faster flash) of WHY 433 LED and a change of its color that confirms the correct learning of code. This step may take a few seconds.
5. While the LED is flashing, press the button of the "WHY 433" where you want to program the code just learnt, and retain pressed until the LED switches off. This step may take some seconds.
6. The copy has been happened with success. Now check on the automation the correct functioning of the new WHY 433 remote control.

Notes:

- If the LED flashes only 3 times and switches off, the code has not learnt correctly. Please repeat the operation from the step 1.
- The WHY 433 memory is completely re-writable.
- To duplicate further buttons of WHY 433, please repeat the operation from the step 1.

1. While pressing the button 1 of the "WHY 433", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY 433 LED will emit a short flash every 2 seconds.
3. Place the remote control in front of the WHY 433 (back to back as in the image).
4. Press and retain pressed the button of the original remote control and wait for a change flash (as a faster flash) of WHY 433 LED and a change of its color that confirms the correct learning of code. This step may take a few seconds.
5. While the LED is flashing, press the button of the "WHY 433" where you want to program the code just learnt, and retain pressed until the LED will switch off.
6. The copy has been happened with success.
7. Activate now the correct procedure for the programmed model and insert the new remote control on the receiver (see the compatibility list present in this manual).

Notes:

- If the LED flashes only 3 times and switches off, the code has not learnt correctly. Please repeat the operation from the step 1.
- The WHY 433 memory is completely re-writable.
- To duplicate further buttons of WHY 433, please repeat the operation from the step 1.

To activate the remote control on the receiver for models marked with  proceed as below:

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button during 10 seconds, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.


To activate on the receiver all the other models: Refer you to the instructions of the original model.

NOTE: THE SEED CODE OF THE WHY EVO CAN BE EMITTED AS HERE BELOW:

1. Press the buttons 1 and 2 simultaneously for 8 seconds and release them when the LED start to flash;
2. While the LED is flashing press the button with the seed code needed.

ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".



1. While pressing the button 1 of the "WHY 433", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY 433 LED will emit a short flash every 2 seconds.
3. Place the remote control in front of the WHY 433 (back to back as in the image).
4. Press and retain pressed the button to be programmed of the original remote control, till the LED will switch on as a fix light; now release the button.
5. The WHY 433 LED will emit a short flash every 2 seconds. That it informs the user that, to duplicate the remote control, it is necessary to emit the SEED CODE to realize the copy.
6. Transmit now the SEED CODE of the BFT original remote control, using a pin, press the rear hide button (see the picture) or, according to the new references, press the 1 and 2 buttons until the original remote control LED switches on. (see the picture)
7. Now the WHY 433 WHITE LED will change the flash mode (more fast), for a reconfirmation of the correct code learning. This step may take some seconds.
8. At this moment, press the WHY 433 button when you want to store the code and retain pressed until the WHY 433 BLUE LED switches off.
9. Activate now the  procedure to insert the new remote control on the receiver.

To activate the remote control on the receiver for models marked with  proceed as below:

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button during 10 seconds, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

To activate on the receiver all the other models: Refer you to the instructions of the original model.

NOTE: THE SEED CODE OF THE WHY EVO CAN BE EMITTED AS HERE BELOW:

1. Press the buttons 1 and 2 simultaneously for 8 seconds and release them when the LED start to flash;
2. While the LED is flashing press the button with the seed code needed.

ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".

FAAC 
433 - 868




GENIUS 
433 - 868



**Attention: verify the programming remote control is a MASTER.
Pressing whatever button, the LED has to emit a double flash rather than to switch on as a fixed light.**

1. While pressing the button 1 of the "WHY 433", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY 433 LED will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY 433", at about 5 cm of distance.
4. Press and retain pressed the button to be programmed of the original remote control, till the LED will switch on as a fix light; now release the button.
5. The WHY 433 LED will emit a short flash every 2 seconds. That it informs the user that, to duplicate the remote control, it is necessary to emit the SEED CODE to realize the copy.
6. Predispose the FAAC/GENIUS remote control for the SEED CODE emission. Press at the same time the 1 and 2 buttons (note: THESE ARE THE BUTTONS OF THE DIAGONAL LINE as in the picture).

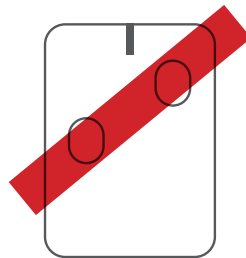

7. While FAAC/GENIUS remote control LED flashes, place it in front of WHY 433 at a distance of 5cm and press the button to be programmed until the WHY 433 LED will change the flash mode (more fast), for a reconfirmation of the correct code learning. This step may take some seconds.
8. At this moment, press the button when you want to store the code and retain pressed until the WHY 433 LED, switches off.
9. The copy has been happened with success. Now check on the automation the correct functioning of new WHY 433 remote control pressing two times the copied button.

Notes:

- If the LED flashes only 3 times and switches off, the code has not learnt correctly. Please repeat the operation from the step 1.
- The WHY 433 memory is completely re-writable.
- To duplicate further buttons of WHY 433, please repeat the operation from the step 1.

1. While pressing the button 1 of the "NEW WHY 433", at the same time press 4 times the 2 button.
2. Release both buttons. Now the LED of "NEW WHY 433" will emit a short flash every 2 seconds.
3. Place the "SOURCE WHY 433" in front of the "NEW WHY 433", at about 5 cm of distance (as in the picture 3 at the page 3).
4. Press and retain pressed the button to be programmed of the "SOURCE WHY 433"


NOW IF THE CODE IN THE "SOURCE WHY 433"

 


IS A FIXED OR ROLLING-SIMPLE CODE

5a wait for a change flash (as a faster flash) of "NEW WHY 433" LED and a change of its color that confirms the correct learning of code. This operation may take some seconds.

6a While the LED is flashing, press the button of the "NEW WHY 433" where you want to program the code just learnt, and retain pressed until the LED will switch off.

7a The copy has been happened with success. Now check on the automation the correct functioning of NEW WHY 433 remote control pressing directly the button where the code has been programmed. If it will not work, please proceed with the insertion on the receiver of the NEW WHY 433, through the  function, if it is present, or through the procedures given by the automation manufacturer.




IS A ROLLING-COMPLEX CODE

5b The WHY 433 LED will emit a short flash every 2 seconds. That it informs the user that, to duplicate the remote control, it is necessary to emit the SEED CODE to realize the copy.

6b Transmit now the SEED CODE of the "SOURCE WHY 433" pressing at the same time 1 and 2 buttons for 3 seconds till the switch on of LED. While the LED is flashing, (within 10 seconds) pressing and retain pressed the button where you want to program the SEED CODE.

7b Now the LED of the "NEW WHY 433" will change the flash (more fast) and color to confirm the correct learning of the code. This step may take some seconds.

8b At this moment, press the NEW WHY 433 button when you want to store the code and retain pressed until the WHY 433 LED, switches off.

9b The copy has been happened with success. Now check on the automation the correct functioning of NEW WHY 433 remote control pressing directly the button where the code has been programmed. If it will not work, please proceed with the insertion on the receiver of the NEW WHY 433, through the  function, if it is present, or through the procedures given by the automation manufacturer.

Notes:

- If the LED flashes only 3 times and switches off, the code has not learnt correctly. Please repeat the operation from the step 1.
- The WHY 433 memory is completely re-writable.
- To duplicate further buttons of WHY 433, please repeat the operation from the step 1.

TO REACTIVATE THE ROLLING SICE TECH CODE INSERTED AS DEFAULT ON A BUTTON, PROCEED AS HERE BELOW:

1. While pressing the button 1 of the WHY 433, at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHITE LED "WHY 433" will emit a short flash every 2 seconds.
3. Press the button where you want to reactivate the rolling code and retain pressed till the LED switches off.

NOTES:

TO reactivate further buttons of WHY 433, please repeat the operation from the step 1.

TO MAINTAIN THE SAME SERIAL NUMBER OF A ROLLING REMOTE

1. While pressing the button 2 of the WHY 433, at the same time press 4 times the 2 button.
2. Release both buttons. Now the LED "WHY 433" will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY 433", at about 5 cm of distance (as shown in the picture at the page 3).
4. Press and retain pressed the 1 button of the original remote control and wait for a change of color of "WHY 433" LED that it will switch off.
5. Choice the button where you want to program the frequency and press it. This step may take some seconds.
6. The copy has been happened.
7. Activate now the correct procedure for the copied model and insert the new remote control on the receiver (see the compatibility list present in this manual).
8. Repeat this procedure for the other buttons, if necessary.

PROGRAM A ROLLING CODE ON EACH BUTTON WITH A SERIAL NUMBER

1. While pressing the button 4 of the WHY 433, at the same time press 4 times the 1 button.
2. Release both buttons. Now the LED "WHY 433" will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY 433", at about 5 cm of distance (as shown in the picture at the page 3).
4. Press and retain pressed the 1 button of the original remote control switches off.
5. Choice the button where you want to program the frequency and press it. This step may take some seconds.
6. The copy has been happened.
7. Activate now the correct procedure for the copied model and insert the new remote control on the receiver (see the compatibility list present in this manual).

LEGEND:



WHY SYNC TECHNOLOGY



ACT ON THE RECEIVER



DIRECT FUNCTIONING

ACM TX2, TX2 COLOR, TX4		FAAC XT 433 RC, TE433HG, XT4 433 RCBE		ROPER NEO	
ADYX TE4433H BLUE, 433-HG BRAVO		FADINI JUBI-SMALL, JUBI 433, DIVO 71/4		SABUTOM BROOVER, BROSTAR	
AERF COMPACT, HY-DOM, MERCURI B, MERCURI C, SABUTON, MARS, SATURN, ST3/N, TERRA, TMP-1, TMP-2, UNITECH		GENIUS BRAVO, ECHO		SEAV BE HAPPY RS, BE SMART	
ALLMATIC BROWN, BROWN RED, BRO.OVER, PASS, MINIPASS, TECH3, FOR4		GIBIDI AU1600, AU1600 WOOD, AU1680, AU1680 WOOD, DOMINO, MAKO		SECULUX NEO	
APRIMATIC TR, TM4, TXM		JCM NEO, TWIN		SILVELOX MHZ 2007, QUARZ SAW	
AVIDSEN 104251, 104250, 104250 OLD, 104250 RED, 104257, 104350, 654250, TX4 114253		KBLUE ETH-TEL01		SIMINOR CVXNL, MITTO	
BENINCA TO. GO. WV, TWV, ROLLKEY, APPLE, LOT WCV, CUPIDO, HAPPY VA, TO.GO. VA		KEY 900TXB-42R, TXB 44R, SUB 44R		SIMINOR SIM433	
BENINCA IO		KING GATES CLIPPER, STYLO		SOMFY K-EASY, K-EASY NEW, K-EASY OLD, MITTO, KEY GO RTS, TELIS RTS, KEYTIS RTS, KEYTIS RTS NS, ALARMA	
BFT MITTO, MITTO M, MITTO RCB, MITTO A, TRC, GHIBLI, MURALE, KLEIO		KLING KUA, KUA E, KUA S		STAGNOLI KALLISTO, VENUS AV223	
CASALI GENIUS/CASALI A252RC		LIFE FIDO		TAU 250K-SLIMRP, 250K-SLIMR, 250T-4RP	
CLEMSA MUTANCODE, T, T-8, E-CODE N		MHOUSE TX3, TX4, GTX4		TOR LIFT TORMIT4	
DASPI ZERO RC		MOOVO MT4G		VZ TSC, TXC, TRC, HANDY, PHOENIX, PHOX 433	
DEA SYSTEM PUNTO 278, GOLDR, GENIE R 273, GENIE R-GT2M, MID TR, GT2M, TRN		NICE SMILO, FLOR-S, VERY-VR, FLOR-S ERA, INTI, ERGO, PLANO		VDS ECO-R, TRQ P	
DITEC/ENTREMATI BIXLP, GOL4, BIXLG, ZEN		NORTON NEO, TXCD			
DOORHAN TRANSMITTER 4		NOVOFERM MCHS, MICRO-NOVOTRON 502, MINI-NOVOTRON 504, MICRO-NOVOTRON 502, MICRO-NOVOTRON 504, MICRO-NOVOTRON 31, MICRO-NOVOTRON 51, MINI-NOVOTRON 30, MINI-NOVOTRON 50, MNHS, MINI NOVOTRON 522			
DOORMATIC MILENY, MILENY-EVO		O&O TX, T.COM R4-2, TWIN, TX (NEO)			
ECOSTAR RSC, RSE, RSZ		PRASTEL MTE, MPSTLE, MPSTP2E, TCE, BFOR, TRQ-P, SLIM-E			
ERREKA IRIS, ROLLER 2, ROLLER 433, SOL433, VEGA 433		PUJOL Important: customizations may not be duplicated TWIN, VARIO, VARIO MARS, VARIO OCEAN, NEO			
FAAC TML 433SLH, XT 433 SLH, T 433 SLH, XT 433 SLH BLACK		RIB LITHIO			

WHY SYNC TECHNOLOGY

In close proximity to the automation and before using the original remote control, press and hold the WHY LITE remote control button until LED flashes. Wait for the end of the flashing.

ACTION ON RECEIVER REQUIRED

In close proximity to the automation and before using the original remote control, press and release the PRG or PGM button on the receiver, then press the WHY LITE remote control button.

DIRECT FUNCTION

In close proximity to the automation and before using the original remote control, press the WHY LITE remote control button 4/5 times.